

Instructions for wiring connections between sensors and gauges

Applicable for sender codes: 197347-65, 197367, 196909-11, 198296-8

GAUGE codes: 197341 – 46

