


Instructions Senders for Fuel or Diesel Tanks

Applicable for sender codes: 197070, 197077, 197180, 197068, 197066, 197067, 197073, 197075, 197076

GAUGE code:197341

A. Connection to the tank

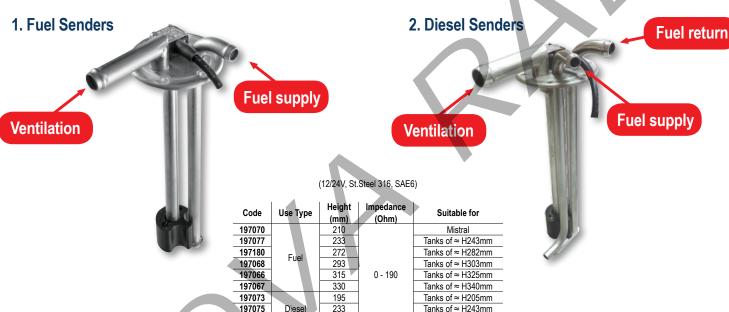

197076

B. Wire Connection



Tanks of ≈ H303mm

To negative pole / common

Gauge for sensors 12/24V, Ø52mm, Black

| Code | Use Type | Impedance (Ohm) |
|--------|----------|--------------------|
| 197341 | Fuel | 0 - 190 |